



INSTALLATION & OPERATION INSTRUCTIONS DIGITAL CONTROL BOX

Your **EVERHOT** cooker has been built to comply with the following European Directives, and carries the CE mark.
1. EMC Directive (89/336/EEC) 2. Low Voltage Directive (73/23/EEC)

Control of Substances - Health and Safety

This appliance contains the following substances indicated below. It is the User's/Installer's responsibility to ensure that the appropriate precautions are taken when handling, where applicable, any of the materials that could be interpreted as being injurious to health and safety.

Mineral wool, Glass Yarn.

May cause irritation to the skin, eyes, nose and throat, may be harmful if inhaled. Use appropriate protective clothing to avoid contact with body. After handling, wash hands and other exposed parts.

Your cooker does not contain ceramic insulants

The **EVERHOT** is a high quality appliance that will provide decades of use, however when you feel that it has reached the end of its working life, please contact us and we will remove it and recycle it free of charge

PRE – INSTALLATION

NOTE: The preparation of the site, in readiness for the installation of the appliance, is the responsibility of the site owner, not of the manufacturer of the appliance.

- a. The floor must be level and capable of supporting the weight of the cooker (approximate weights: **EVH 60** 250kg, **EVH 90** 300kg, **EVH 100** 350kg, **EVH120** 500kg, **EVH150** 550kg).
- b. All cookers are of standard dimensions 600mm deep and 900mm high to the working surface with widths of 600mm (**EVH 60**), 890mm (**EVH 90**), 995mm (**EVH 100**), 1200mm (**EVH 120**) or 1500mm (**EVH 150**). **EVH 60**, **EVH 100**, **EVH 120** or **EVH 150** cookers should be installed with a minimum of 30mm clearance from the back wall to allow for the electric cable entry, and induction hob venting where applicable. **EVH 90** cookers should be installed with a minimum of 15mm. On no account should a cooker be pushed hard against the back wall as this may damage the electric cable, or block the induction vent. A minimum gap of 5mm per side is required to allow installation and removal of the cooker – please contact us in advance of installation if this is not possible. Where the end grain of a wooden worktop is adjacent to the cooker, we recommend that this is increased to 10mm to minimise the chance of cracking.
- c. Clearance must be allowed for the raising of the cooker lid(s) into the upright position (minimum height of 1530mm from ground level). A 5mm gap on each side of the cooker lid should be allowed when in the raised position (each lid is 590mm wide to allow for overhead cupboards).
- d. The appliance must be used on 220-240V AC only and should be plugged into a standard 13 amp socket (**EVH 60** or **EVH 90**, **EVH 100** without induction hob), or two standard 13 amp sockets (**EVH 100** with induction hob, **EVH 120** or **EVH 150**). The 13 amp socket(s) should be accessible and positioned adjacent to the cooker, so as not to impede the opening of the top lid, and ensuring the plug is not exposed to steam or excessive moisture. If the socket(s) cannot be positioned immediately adjacent to the cooker, please see diagrams attached for exact lengths of cables. If the power supply cord is damaged, it must be replaced by the manufacturer or their representative, as special purpose tools are required. An Everhot cooker should NOT be hard wired – please install using the supplied 13amp plug.
- e. **EVH 60** or **EVH 120 only** - The control box is connected to the cooker via a 20mm flexible conduit to allow for a choice of positioning. It may be sited within an adjacent cupboard or on a worktop as required (the control box must not be covered by combustible material or be positioned where contamination with liquids is likely). The control box is not suitable for wall mounting and should remain freestanding in order to facilitate future maintenance. The conduit and power cable should also be easily accessible. Once the position has been decided the control box should not be moved in day to day use. Standard conduit length supplied is 2m. The **EVH 120** is supplied with two control boxes.

POST INSTALLATION

Points a. and b. below will normally be checked by the **EVERHOT** technician who installs your cooker


- a. Before use, check that the cooker is level, upright and stable.
- b. On reaching working temperature, ensure that the hot/simmer plate surfaces are flush with the surrounds - this can be adjusted by means of the screws provided.
- c. On initial heating up odours may be given off from the insulants used. These will disappear after a number of hours.



INSTALLATION & OPERATION INSTRUCTIONS DIGITAL CONTROL BOX

The diagrams below are not to scale and simply to show the length of cable and position of cable exit for each of the models - sockets can be placed either side of the cooker in all models.


CABLE LENGTHS – EVH 60

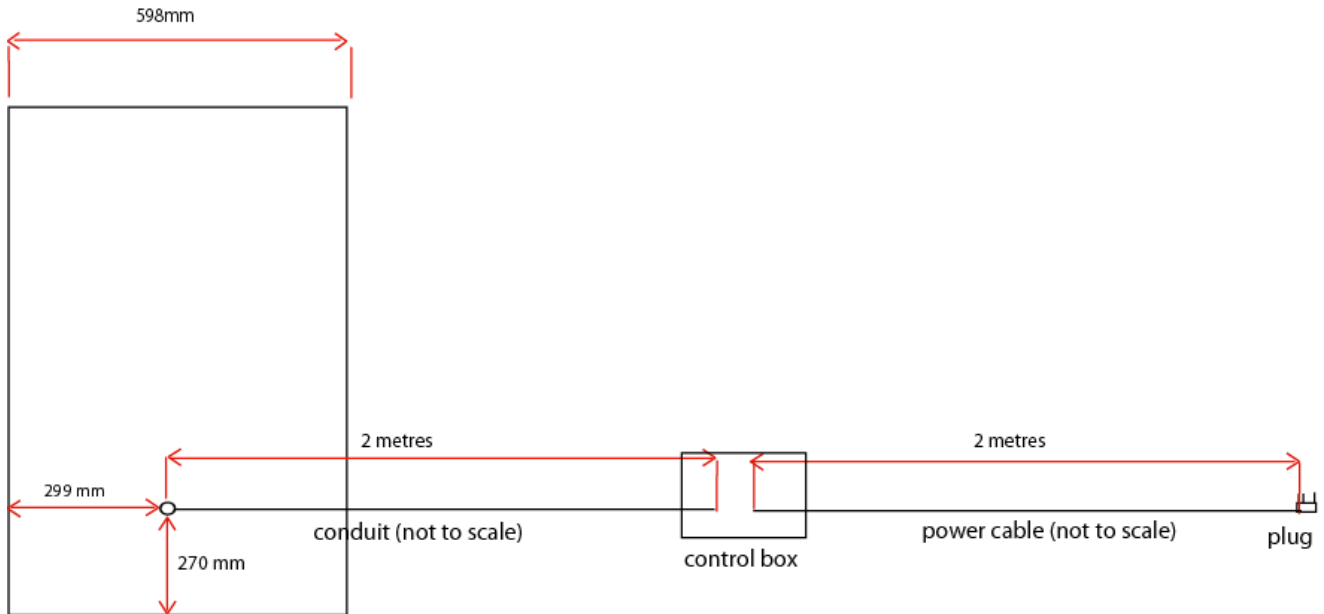

EVH 60 VIEWED FROM BACK

(NB Control box can be placed either side of cooker)

CABLE LENGTHS – EVH 90

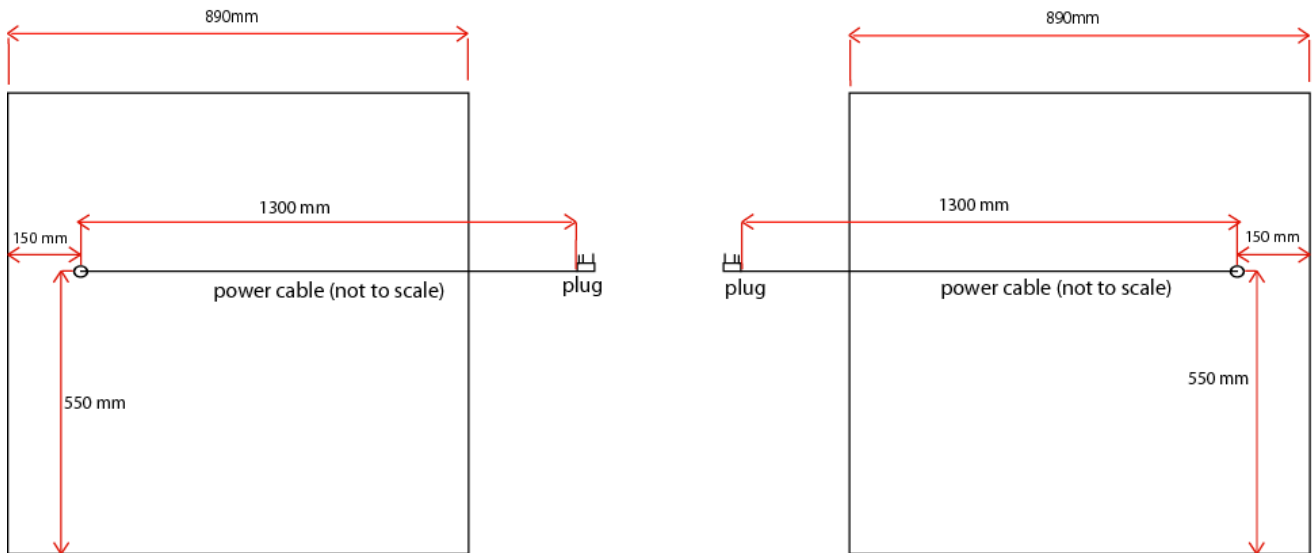

LEFT HAND 90 VIEWED FROM BACK


RIGHT HAND 90 VIEWED FROM BACK




INSTALLATION & OPERATION INSTRUCTIONS DIGITAL CONTROL BOX

The diagrams below are not to scale and simply to show the length of cable and position of cable exit for each of the models - sockets can be placed either side of the cooker in all models.

CABLE LENGTHS – EVH 100

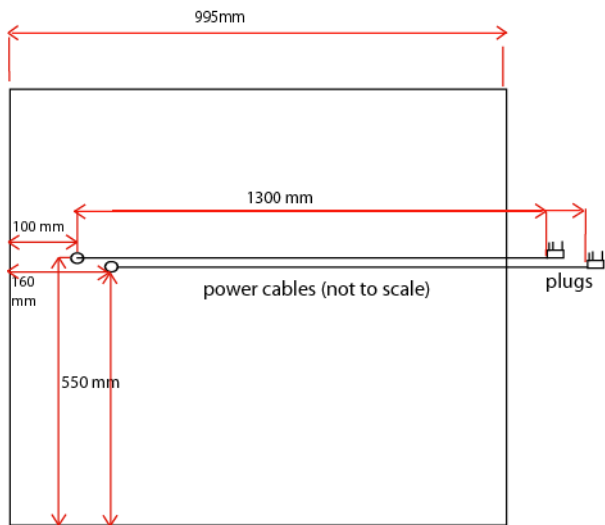


EVERHOT 100i VIEWED FROM BACK

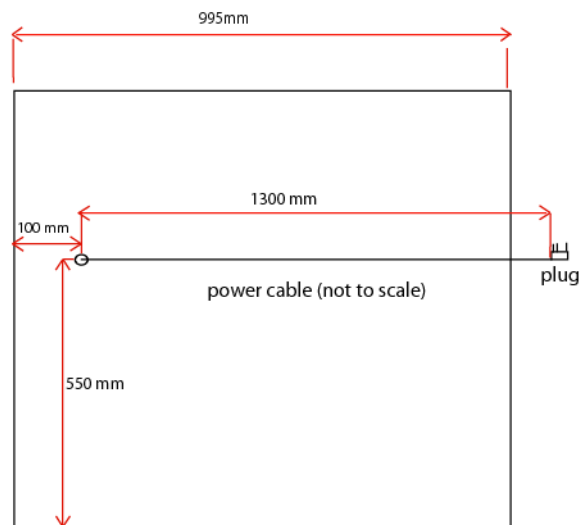

EVERHOT 100 VIEWED FROM BACK

CABLE LENGTHS – EVH 120

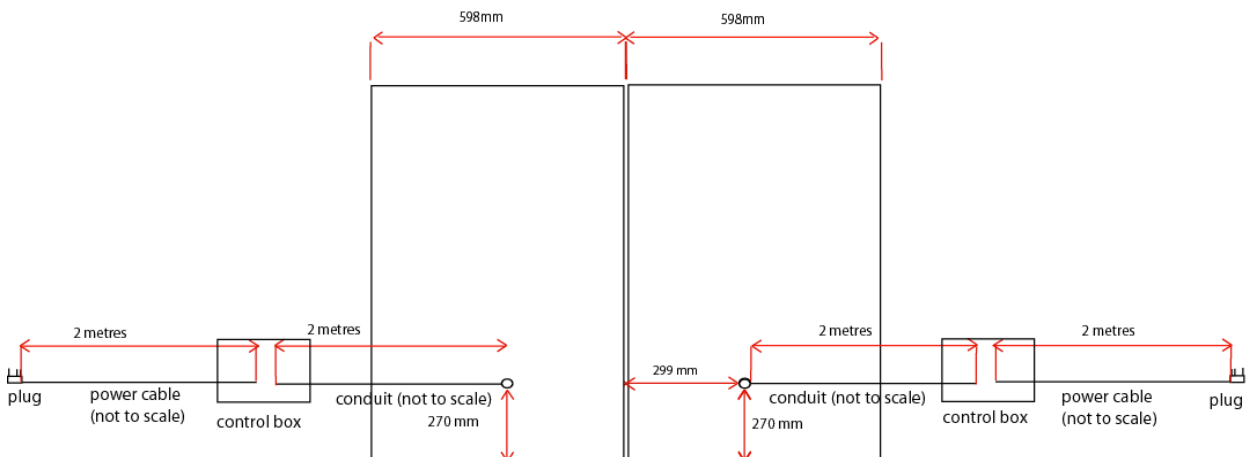


EVH 120 VIEWED FROM BACK
(NB Control boxes can be placed either side of cooker)



INSTALLATION & OPERATION INSTRUCTIONS DIGITAL CONTROL BOX

The diagrams below are not to scale and simply to show the length of cable and position of cable exit for each of the models - sockets can be placed either side of the cooker in all models.

CABLE LENGTHS – EVH 150

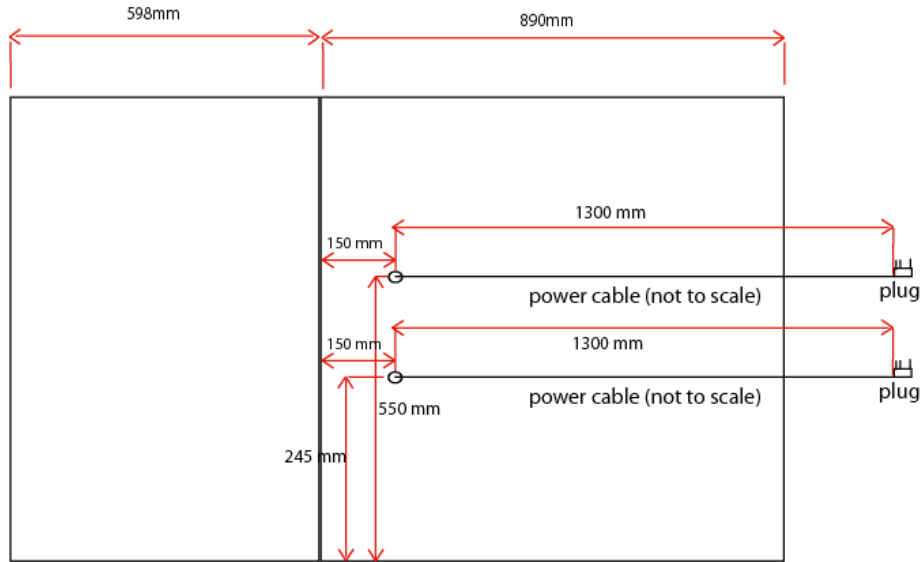

EVH 150 VIEWED FROM BACK